

Jieyang Coopway Industries CO., Ltd
Address: JieYang Industrial Transfer Industrial Park West of Fu
Avenue, South of JinPing Street, JieYang City, Guangdong
Province, P.R. China

Company website : <http://www.coopway.cn/col.jsp?id=127>


Toaster Instruction Manual

Model: TS1188-GS

220-240V~ 50/60Hz 800-950W

DESCRIPTION

1. Bun Warmer
2. Lever handle
3. Reheat function button
4. Color knob
5. Stop function button
6. Defrost function button

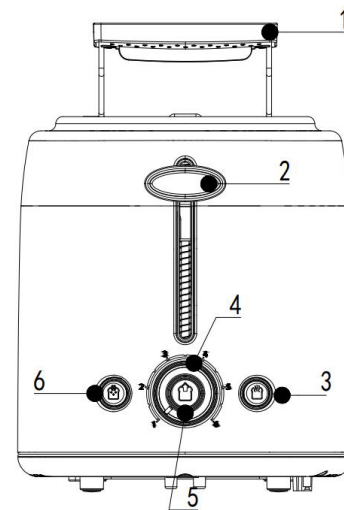

IMPORTANT SAFEGUARDS

- Please read this instruction manual carefully before use and keep it for reference.
- Incorrect operation and improper handling can lead to malfunction or fire.
- Before the first connecting of the appliance check that voltage indicated on the rating label corresponds to the mains voltage in your home.
- For home use only. Do not use for industrial purposes. Do not use the appliance for any other purposes than described in this instruction manual.
- Do not use outdoors.
- Always unplug the appliance from the power supply before cleaning and when not in use.
- To prevent risk of electric shock and fire, do not immerse the appliance in water or other liquids. If it was happened DO NOT TOUCH the appliance, unplug it immediately and check with the service center.
- Do not take this product into a bathroom or use near water.
- Do not place appliance or parts near an open flame, cooking or other heating appliances.
- Close supervision is necessary when it is used near children.
- Do not leave the appliance switched on when not in use.
- Do not use other attachments than those supplied.
- Do not operate after malfunction or cord damage.
- Do not attempt to repair, adjust or replace parts in the appliance. Check and repair the malfunctioning appliance in the nearest service center only.
- Keep the cord away from sharp edges and hot surfaces.
- Do not pull, twist, or wrap the power cord around appliance.
- Do not move the appliance until it cools down completely.
- Never use sharp objects to take out sliced bread! When taking out sliced bread, be careful not to damage the heating wires.

- Do not touch any metal part of the outer surface of the appliance as it may reach a very high temperature.
- Do not insert bread slices that are too thick or wrapped in aluminum foil to avoid electric shock or fire.

• **Power consumption:**
Off mode: ≤0.3W

ATTENTION: *TOO LONG TOASTING MAY CAUSE FIRE.*

- Do not cover the toaster during operation.
- **Bread may burn. Therefore toasters must not be used near or below curtains and other combustible materials. They must be watched.**
- **If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.**
- **The appliances are not intended to be operated by means of an external timer or separate remote-control system.**
- **The surfaces are liable to get hot during use.**

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

Keep the appliance and its cord out of reach of children less than 8 years.

INSTRUCTIONS FOR USE

BEFORE THE FIRST USE

- Before using the toaster for the first time clean your toaster (see Chapter “CARE AND CLEANING”). Operate the toaster at least two times without bread but on the highest setting. Ventilate the room during this period.
- As all new electric heating elements, your toaster creates a new smell when it is first switched on. This is quite normal and not a cause for concern.

TOASTING

- Plug the toaster to the power supply and place 1 or 2 slices of bread into the bread slots of the appliance.
- Adjust the 6 setting timer to a desired level:
 - 1-minimum level
 - 6-maximum level.
- Press down the sliding lever, the toaster will start running automatically and light indicator will go on.
- Bread slices will be ejected out and the appliance will shut down automatically when toasting is finished.

REHEAT FUNCTION

- You can use reheat facility if ready toasts get cold.
- Insert toast into the toaster and pull down the sliding lever. Set the Knob to the reheat function setting on **REHEAT**. The indicator will light up.
- The cold toast can be reheated in short time without over browning.

DEFROST FUNCTION

- Press defrost function button **DEFROST** to prolong toasting time of frozen bread, thus the indicator light should light up.

CANCEL BUTTON

- Toasting can be reset anytime during toasting by pressing **CANCEL** button, thus the indicator light will shut down.

CRUMB TRAY

- The crumb tray is intended for collecting the crumbs, which fall on the base of the toaster while toasting.
- Pull the crumb tray out, empty and place it back.

HEATING ROLL.(ALTERNATIVE)

toaster also features a heating roll.

If required, put the heating roll onto the bread slots. Select a browning degree and start the toasting or warm-up cycle. To set the browning degree, switch on or stop the toaster please refer to above mentioned.

Cleaning and maintenance

- Ensure that the appliance is unplugged before cleaning.
- Let the unit completely cool down.
- Do not use abrasive detergents, any organic solvents or aggressive chemicals.
- Clean off crumbs of bread, buns, etc.

STORAGE

- Switch off and unplug the appliance; let it completely cool.
- Complete all requirements of chapter CARE AND CLEANING.
- Reel on the power cord.
- Keep the appliance in a dry cool place.

Warranty Information

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year (Germany: 2 years), starting from the date on which the appliance is sold to the end user.

The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service centre. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.

The warranty will not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.